

BLUME'S[®]

KOHLER Faucets



Kohler Elate[™]

Pull-Out Kitchen Faucet

SPECIFICATIONS:

- Temperature memory allows faucet to be turned on and off at any temperature setting.
- Integral pullout spray-head with spray, aerated flow and pause functions.
- Single hole or three-hole installation when included 10 1/2" escutcheon plate is used.
- 9" swing spout reach.
- 2.2 gallons per minute maximum flow rate.

Available Finishes:

Polished Chrome • Vibrant Stainless

BLUME'S[®]

KOHLER Faucets



Kohler Forté[®]

Single-Control Pullout Kitchen Faucet

SPECIFICATIONS:

- Temperature memory allows faucet to be turned on and off at any temperature setting.
- Swing spout with integral pullout spray and hose.
- Touch control for stream-to-spray water flow.
- 10 1/8" swing spout reach.
- Includes parts for both single-hole and three-hole installations.
- 2.2 gallons per minute maximum flow rate.

Available Finishes:

Polished Chrome • Vibrant Stainless

BLUME'S[®]

KOHLER Faucets



Kohler Simplice[®]

Single-Hole Pull-Down Kitchen Faucet

SPECIFICATIONS:

- Temperature memory allows faucet to be turned on and off at any temperature setting.
- Three-function spray head with spray, aerated stream and pause settings.
- 360 spout rotation.
- 9" swing spout reach.
- Single hole or three-hole installation when included 10 1/2" escutcheon plate is used.
- 2.2 gallons per minute maximum flow rate.

Available Finishes:

Polished Chrome • Vibrant Stainless

Last Revised 08.25.10

Phone: 724.294.3190

Fax: 724.294.3198

www.blumes.net

BLUME'S®

KOHLER Faucet Care & Maintenance

Care and Cleaning

For best results, keep the following in mind when caring for your KOHLER product:

- Use a mild detergent such as liquid dishwashing soap and warm water for cleaning. Do not use abrasive cleaners that may scratch or dull the surface.
- Carefully read the cleaner product label to ensure the cleaner is safe for use on the material.
- Always test your cleaning solution on an inconspicuous area before applying to the entire surface.
- Do not allow cleaners to sit or soak on the surface.
- Wipe surfaces clean and rinse completely with water immediately after cleaner application. Rinse and dry any overspray that lands on nearby surfaces.
- Use a soft, dampened sponge or cloth. Never use an abrasive material such as a brush or scouring pad to clean surfaces.
- Do not use cleaners containing ammonia, bleach or acid.
- Rinse thoroughly and use a soft cloth to wipe the product dry after each use.

Products approved by the manufacturer:

Comet
Fantastik
Windex Original

To order Care & Cleaning information, call Kohler at 1-800-456-4537.

Last Revised 08.25.10

Phone: 724.294.3190

Fax: 724.294.3198

www.blumes.net