



Eased


EDGES

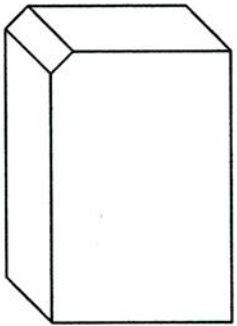


1/8" Bevel

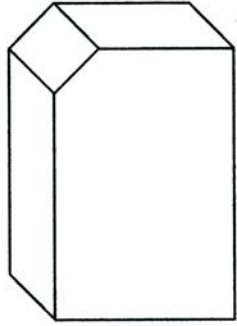


1/4" Bevel

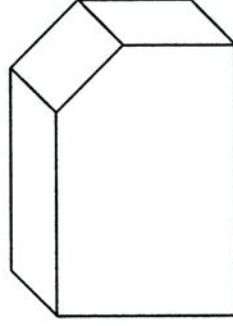


3/8" Bevel

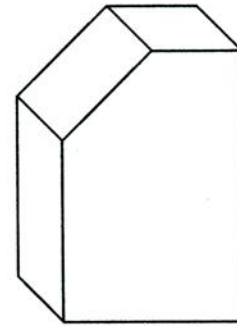


1/2" Bevel

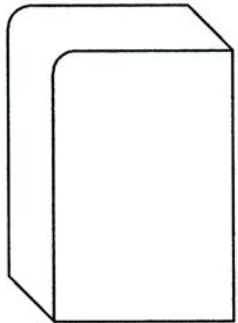


1/8" Roundover

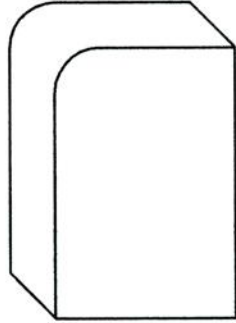


1/4" Roundover

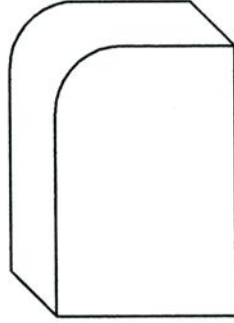


3/8" Roundover

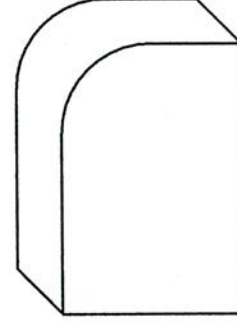


1/2" Roundover

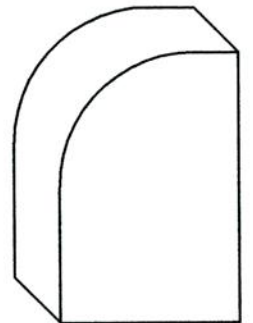

3/4" Roundover

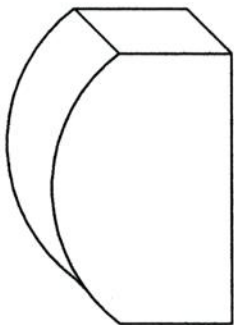


Half Bullnose

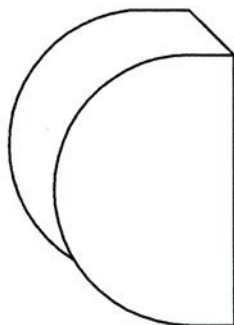


Full Bullnose


*Minimum Thickness
1 3/4"

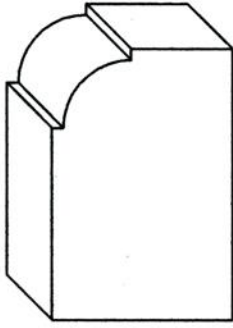

3/8" Beaded Roundover

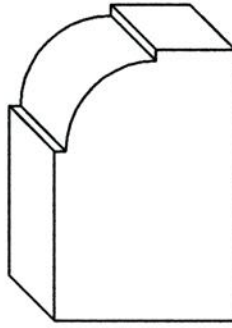


1/2" Beaded Roundover

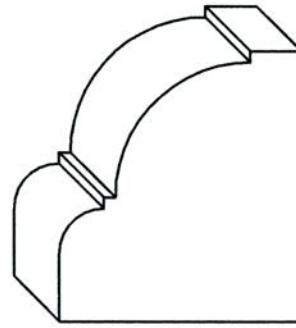


Huge Double Beaded Roundover


*Minimum Thickness
2 1/2"

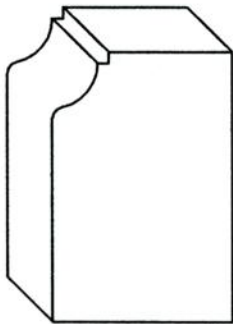


Small Standard Ogee

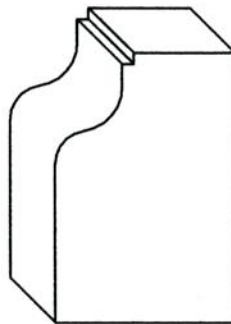


Large Standard Ogee

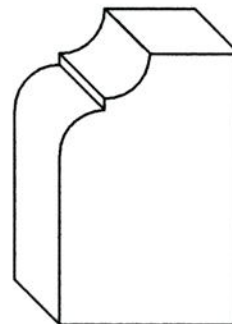

Classic Ogee

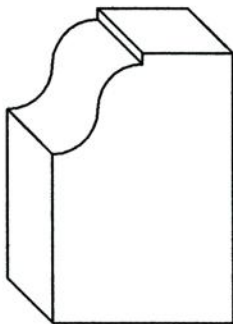


Traditional Ogee

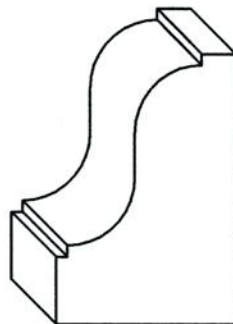


Large Beaded Traditional Ogee


*Minimum Thickness
2"

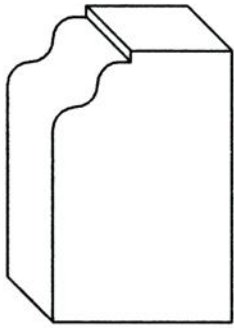

Roman
Ogee

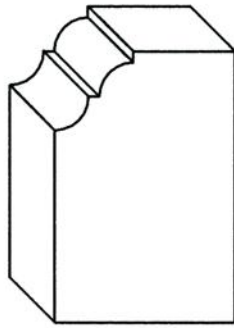


Small Double
Roman Ogee

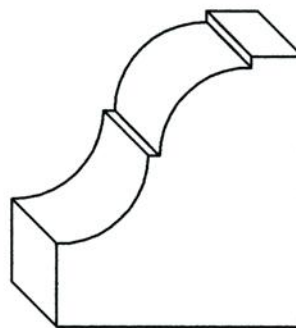


Large Double
Roman Ogee


*Minimum Thickness
 $1\frac{3}{4}$ "

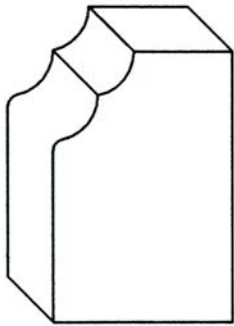


Waterfall

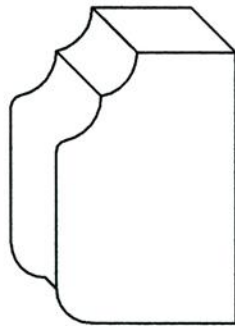

Waterfall
Roundover

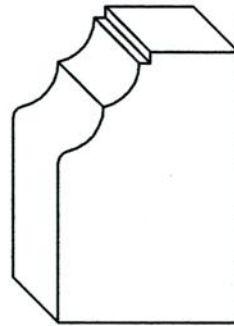


Beaded
Waterfall

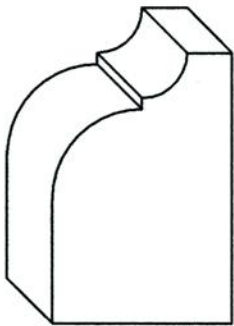


Classical Gas

*Minimum Thickness
 $1\frac{1}{2}$ "

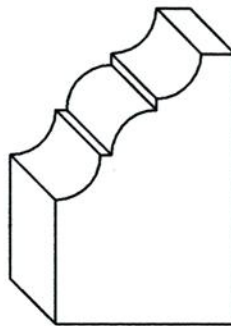

French
Baroque

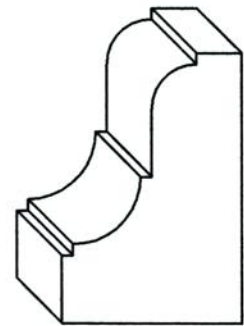

Verona

*Minimum Thickness
 $2\frac{1}{4}$ "